


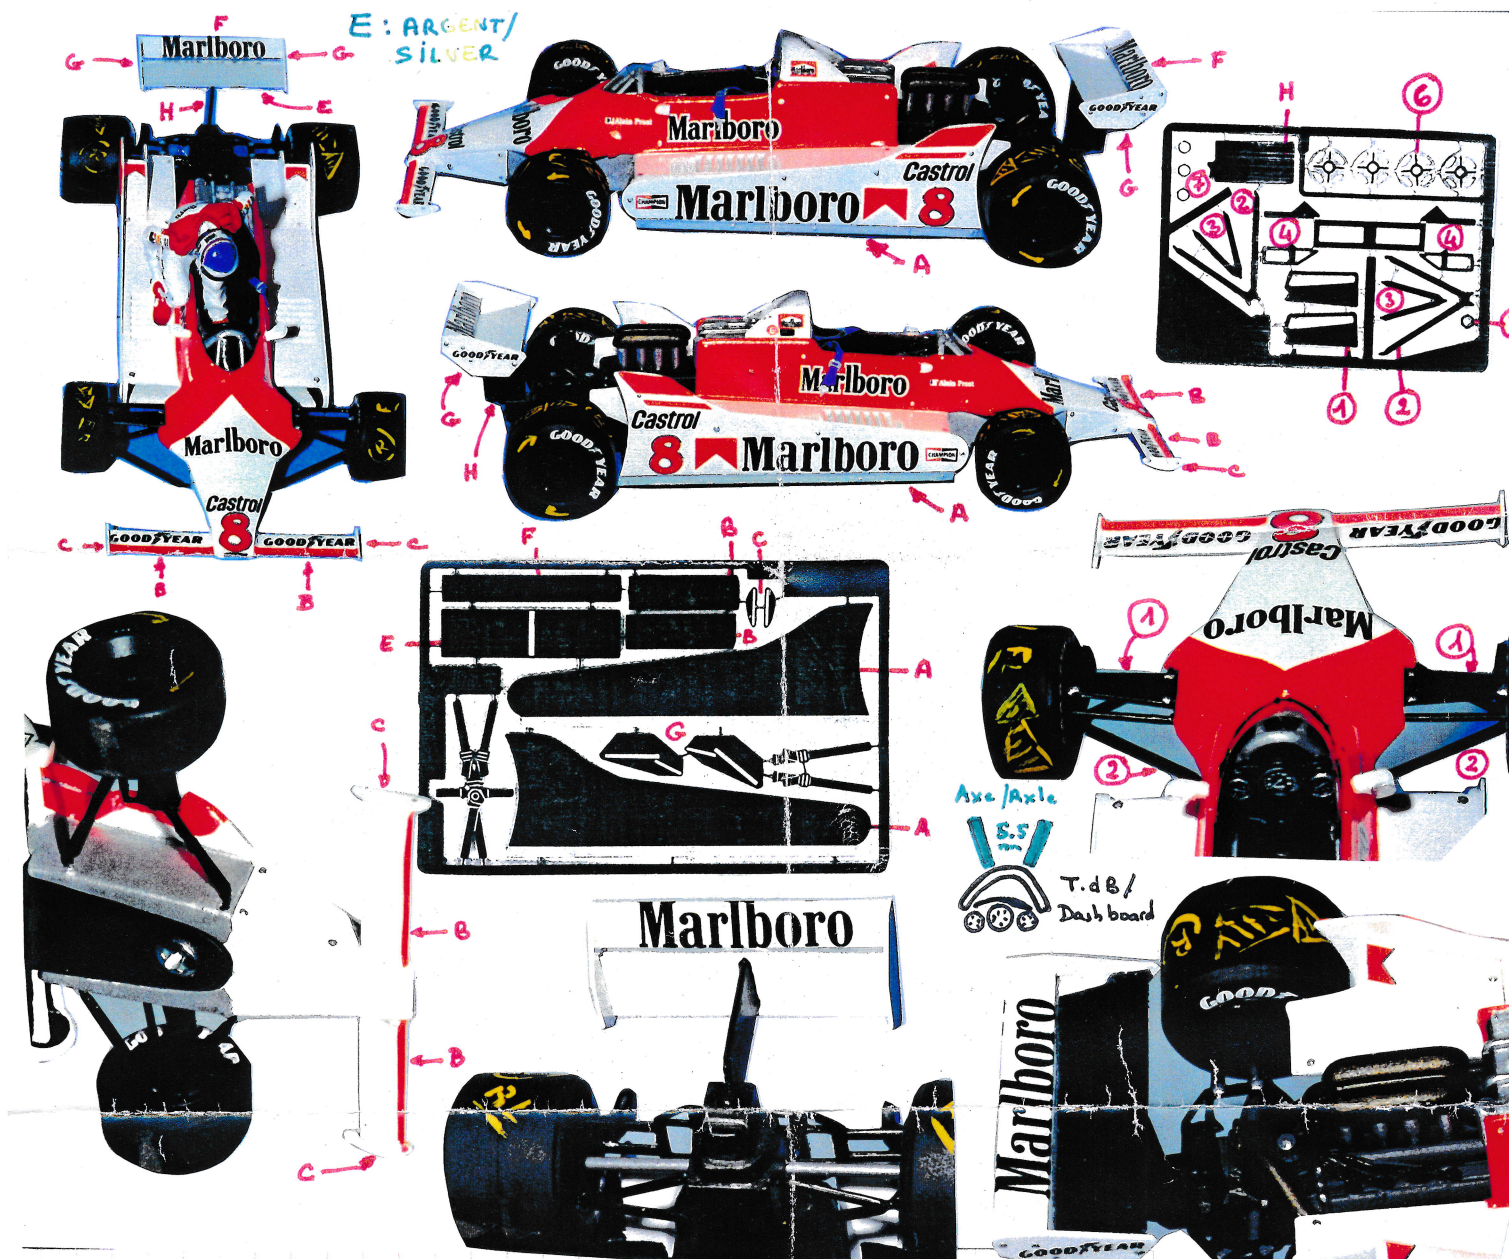

* AVANT PEINTURE / BEFORE PAINTING :

1 - Montage aileron AR / built rear wing **E.F.G**

2 - Montage photoeach / built **A.B.C** on the body


* PEINDRE en BLANC l'ensemble / PAINT in WHITE + Finitions.

3 - Train AV / Front suspension (Photoeach + resin peint en Noir / paint black)

- ① : coller sur caisse / glue on body

- ② : " " " " / " " " "

- Coller entre moyen resin / glue between resin part :

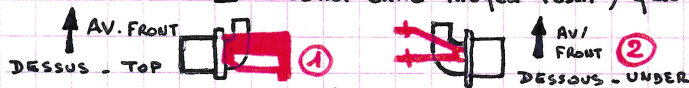



* PEINDRE le Chassis / PAINT the base.

4 - Train AR / Rear suspension (Photoeach + resin peint en Noir / paint in black)


- Percer $\phi 1,3$ la boîte pour passage de l'axe

- ③ : Coller sur Chassis / glue on base

- ④ : Couper en 2 / Cut in 2 parts

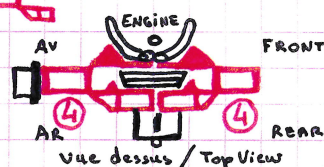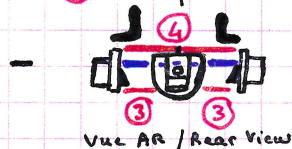

5 - Roues AR / REAR WHEELS : Coller les jantes de 5,5 mm 2 par 2
Glue the wheels (5.5 mm) 2 x 2

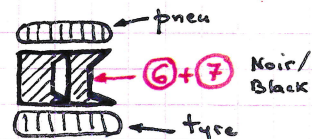

K1356 Mc LAREN M29B PROST BRESIL 1980